

# **HQT-4120**<sup>Q&As</sup>

Hitachi Vantara Qualified Professional VSP G200 to VSP G800 Storage Installation

# Pass Hitachi HQT-4120 Exam with 100% Guarantee

Free Download Real Questions & Answers **PDF** and **VCE** file from:

https://www.geekcert.com/hqt-4120.html

100% Passing Guarantee 100% Money Back Assurance

Following Questions and Answers are all new published by Hitachi
Official Exam Center

- Instant Download After Purchase
- 100% Money Back Guarantee
- 365 Days Free Update
- 800,000+ Satisfied Customers



## https://www.geekcert.com/hqt-4120.html

#### **QUESTION 1**

You need to replace a part in a VSP G800.

What are three ways for you to invoke the Maintenance Utility? (Choose three.)

- A. using the GUM
- B. using the HM800 SRT tool
- C. from Hitachi Command Suite
- D. in the HM800 maintenance wizard
- E. from the MPC connected to the Maintenance LAN port on the array

Correct Answer: ACE

#### **QUESTION 2**

You are installing six VSP Gx00 systems at a customer site.

Whichtool allows you to apply the licenses to all the systems at the same time?

- A. Initial Setup Tool
- B. Device Manager Storage Navigator
- C. SVP Web Console
- D. HCS License Key Management System

Correct Answer: A

#### **QUESTION 3**

Which two reconfiguration activities are performed without interrupting host access on a VSP Gx00 system? (Choose two.)

- A. adding a DKB
- B. adding a DB60 drive tray
- C. upgrading from G200 to G800
- D. upgrading from G200 to G600

Correct Answer: AB



### https://www.geekcert.com/hqt-4120.html

2024 Latest geekcert HQT-4120 PDF and VCE dumps Download

#### **QUESTION 4**

Which three drive box types are supported on the VSP Gx00 series? (Choose three.) Choose 3 answers

A. DBL

B. DBX

C. DBS

D. DBM

E. DB60

Correct Answer: ACE

#### **QUESTION 5**

What are two ways to obtain Information details on failed parts in a VSP Gx00system? (Choose two.)

A. from the Maintenance Utility interface

B. from the audit log In Storage Navigator

C. from the MPC information tab message logs

D. from the warning LED on the system front panel

Correct Answer: AD

HQT-4120 VCE Dumps HQT-4120 Study Guide HQT-4120 B